



DWC-VSTB04BIB - Black housing model.



Default Login Information: admin | admin

When logging into the camera for the first time, you will be prompted to set up a new password. You can set the new password using the $\mathsf{DW}^*\operatorname{\mathsf{IP}}\nolimits\mathsf{Finder}^*$ software or directly from the camera's browser menu.

WHAT'S IN THE BOX					
Quick Setup and Installation Guides		1 set	Tapping Screws - 3pcs	ÎĨÎ	1 set
Mounting Template	$(\overline{\mathbb{Z}})$	1	Plastic Plugs - 3pcs		1 set
Waterproof Cap	$\bigcirc \circ$	1 set	Rubber Plug	(B)	1
Hexagonal Wrench 0.07" (2mm)		1			
	al-watchdog.com/i entering the part nu le part numbers will rted materials, inclu	resource: umber in t populate ding mar	s the 'Search by Product' search e automatically based on the nuals	D D D	

Attention: This document is intended to serve as a quick reference for the initial set-up. It is recommended that the user read the entire instruction manual for complete and proper installation and usage.

SAFETY AND WARNING INFORMATION

Read through this Installation Guide carefully before installing the product. Keep the Installation Guide for future reference. See the user manual for more information on the proper installation, use and care of the product. These instructions are intended to ensure that users can use the product correctly to avoid danger or property loss. Warnings: Serious injury or death may occur if any of the warnings are neglected. Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

WARNING

- In the use of the product, you must be strict compliance with the electrical safety regulations of the nation and region. When the product is mounted on a wall or ceiling, the device shall be firmly fixed. Be sure to use only the standard adapter specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product. Make sure the power supply voltage is correct before using the camera. 1. 2.
- 3 4.
- 5.
- Make sure the power supply voltage is correct before using the camera. Incorrectly connecting the power supply or replacing the battery may cause an explosion, fire, electric shock, or damage to the product. Do not connect multiple cameras to a single adapter. Exceeding the capacity may cause excessive heat generation or fire. Securely plug the power cord into the power source. An insecure connection may cause a fire. When installing the camera, fasten it securely and firmly. A falling camera may cause personal injury. Do not install in a location subject to elevated temperature, low temperature, or high humidity. Doing so may cause fire or electric shock. Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects. 6. 7. 8.
- 9. 10.
- 11.
- Do not place conductive objects (e.g. screwdrivers, coins, metal items, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects. Do not install in humid, dusty, or sooty locations. Doing so may cause fire or electric shock. Do not install near any heat sources such as radiators, heat registers, or other products (including amplifiers) that produce heat. Keep out of direct sunlight and heat radiation sources. It may cause a fire. If any unusual smells or smoke come from the unit, stop using the product at once. Immediately disconnect the power source and contact the service center. Continued use in such a condition may cause fire or electric shock. If this product does not operate normally, contact the nearest service center. Never disassemble or change this product in any way. When cleaning the product, do not spray water directly onto parts of the product. Doing so may cause fire or electric shock. 13. 14.
- 15. electric shock

CAUTION

- Use proper safety gear when installing and wiring the product. Do not drop objects on the product or apply strong shock to it. Keep away from a location subject to excessive vibration or magnetic interference. 2.
- 3
- Do not use this product near water. The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. 4 5. Avoid aiming the camera directly towards extremely bright objects such as the sun, as this may damage the
- image sensor. The Main plug is used as a disconnect device and shall stay readily operable at any time. 6.
- do so m Remove damage to the product 8
- Gamage to the product. Do not block any ventilation openings. Install following the manufacturer's instructions. A polarized or grounding-type plug is recommended for this product. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. If the provided plug does not fit into your outlet, consult an electrician for replacement. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product. 9. 10.
- If any laser equipment is used near the product, make sure the surface of the sensor is not exposed to the laser 11.
- beam as that may damage the sensor module. If you want to move the already installed product, be sure to turn off the power and then move or reinstall it. Proper configuration of all passwords and other security settings is the responsibility of the installer and/or 12 13.
- end-user 14. cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time,
- please cover the lens cap to protect the device from dirt. Do not touch the camera's lens or sensor module with fingers. If cleaning is necessary, please use a clean cloth to wipe it gently. If the device will not be used for a long time, please cover the lens cap to protect the device 15. from dirt.

16

Use only attachments/accessories specified by the manufacturer. Always use hardware (e.g. screws, anchors, bolts, locking nuts, etc.) compatible with the mounting surface and of sufficient length and construction to ensure a secure mount. Use only with cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the product. Unplug this product when a cart is used. Use caution when moving the cart/product combination to avoid injury from the over 17.

18 19. from tip-over.

20. Refer all servicing to qualified service personnel. Servicing is needed when the product has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.

 
STEP 1 - PREPARING TO MOUNT THE CAMERA

Using the mounting template sheet or the camera itself, mark and drill the necessary holes in the wall or ceiling.


STEP 2 – POWERING THE CAMERA

Pass the wires through and make all necessary connections.

Use a PoE Switch or PoE Injector to connect data and power to the camera using a single Ethernet cable. Use a non-PoE Switch to connect data using an Ethernet cable and use a power adapter to power the camera.



Power requirements

 


Power consumption

DC12V, PoE (IEEE 802.3af class 2). <5W Adapter not Included. If needed, install the waterproof cap. NOTE: In extreme environments use of an outdoor rated sealer is recommended. M CAMERA RECORDER 0 SEAL TAPE 0 Ξ 0


STEP 3 - INSTALLING THE CAMERA

- 1. Mount the camera to the mounting surface using the included screws and anchors.
- Adjust the camera's pan and tilt by loosening the lock screw at the base of the camera. 2. Tighten the screw once the adjustment is complete.

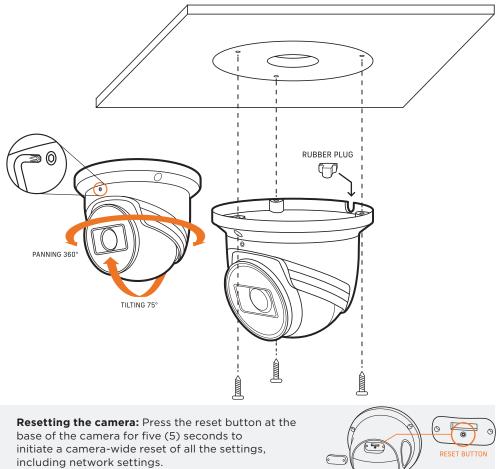

STEP 4 - CABLING

Use the diagram below to properly connect power, network, alarm input and outputs and audio to the camera.

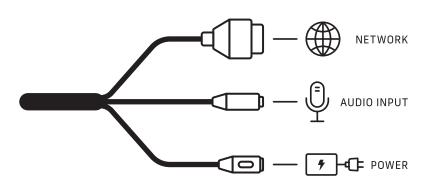

STEP 5 - MANAGING THE SD CARD (OPTIONAL)

- Loosen the fixed screw at the base of the camera to rotate the camera module and remove 1. the control panel cover to access the SD card slot at the base of the camera.
- 2. Insert class 10 SD/SDHC/SDXC card into the SD card slot (max 256GB).
- 3. Press the card inward until it clicks to release from the card slot.



STEP 6 – DW[®] IP FINDER[™]

Use the DW[®] IP Finder[™] software to scan the network and detect all MEGApix[®] cameras, set the camera's network settings or access the camera's web client.

Camera name —	📔 IP Finder Ver 44.16			- 0 X	-Firmware version
Select network to scan—	Technolk 192.366.21.89 (192.166.21.89)	Al Name IP Address Mod		Total Devces : 1	Camera's uptime
Filter results Scan network Show/hide thumbnail view Refresh thumbnail view	Al Scal Devices Therefore Estrets Estrets Thureforel Estrets Thureforel Estrets Thureforel				Open IP configuration settings
Bulk IP assignment – Bulk codec assignment – Bulk date/time assignment – Bulk password assignment –	Ik-& IP-Auspreset Bulk Color, Auspreset Bulk Color, Auspreset Bulk Passeet Auspreset IVV Opp3d				Ping camera Camera's network information
Firmware upgrade –					_Camera's name, IP and MAC addresses
	Consus Canes Accurt @ also Canes Consus Consus Canes Consus Consus Canes Consus Consus Canes Consu				

Network Setup

- 1. To install the DW IP Finder, go to: http://www.digital-watchdog.com
- 2. Enter "DW IP Finder" on the search box at the top of the page.
- 3. Go to the "Software" tab on the DW IP Finder page to download and install the installation file.
- 4. Open the DW IP Finder and click 'Scan Devices'. It will scan the selected network for all supported devices and list the results in the table. During the scan, the DW $^{\circ}$ logo will turn gray.
- 5. When connecting to the camera for the first time, a password must be set.
 - a. Check the box next to the camera in the IP Finder's search results. You can select multiple cameras.
 - b. Click "Bulk Password Assign" on the left.
 - c. Enter admin/admin for the current username and password. Enter a new username and password to the right. Passwords must have a minimum of eight (8) characters and at least four (4) combinations of uppercase and lowercase letters, numbers and special characters. Passwords cannot contain the user ID.
 - d. Click "change" to apply all changes.
- 6. Select a camera from the list by double-clicking on the camera's name or clicking on the 'Click' button. The pop-up window will show the camera's current network settings. Admin users can adjust the settings as needed. The camera's network

Duncrussitione	Assignment		
Current Accour	nt	New Password	
Usemame		New	
Password		Confirm	
		Hint	
			Chang
Name	MAC Address	IP Address	Note
DWC-MF2Wi4T	00:0D:F1:21:66:92	192.168.10.159	
-			
DW Camera	Settings		×
DW Camera	Settings		×
DW Camera Camera N		DWC-MF4Wi6C6	
Camera N	ame		
	ame	DWC-MF4Wi6C6 00:0D:F1:2B:7B:C	
Camera N	ame		
Camera N	ame		
Camera N MAC Addr	ame ame		
Camera N MAC Addr	ame ame		
Camera N MAC Addr	ame ame		
Camera N MAC Addr	ame ame ss sciences s		
Camera N MAC Addr O DHC IP Add	ame ess P tic IP	00:0D:F1:2B:7B:C	
Camera N MAC Addr O DHC Stat	ame	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0	
Camera N MAC Addr O DHC I DHC IP Add Netma Gatew	ame	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0 192.168.21 .1	
Camera N MAC Addr O DHC Stat	ame	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0	
Camera N MAC Addr O DHC I DHC IP Add Netma Gatew	ame	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0 192.168.21 .1	
Camera N MAC Addr O DHC Stat IP Add Netma Gatew DNS	ame ses P ic IP Iress sisk ray	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0 192.168.21 .1	
Camera N MAC Addr O DHC Stat IP Add Netma Gatew DNS	ame	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0 192.168.21 .1	
Camera N MAC Addr O DHC O Stat IP Add Netma Gatew DNS	ame ses P ic IP Iress sisk ray	00:0D:F1:28:78:C 192.168.21 .144 255.255.255.0 192.168.21 .1	
Camera N MAC Addr O DHC IP Add IP Add Netma Gatew DNS Camera Usernan	ame ses ses ses ses ses ses ses ses ses s	00:0D:F1:28:78:0 192.168.21 .144 255.255.255.0 192.168.21 .1 8 .8 .8 .8	
Camera N MAC Addr O DHC IP Add IP Add Netma Gatew DNS Camera Usernan	ame ses ses ses ses ses ses ses ses ses s	00:0D:F1:28:78:0 192.168.21 .144 255.255.255.0 192.168.21 .1 8 .8 .8 .8	
Camera N MAC Addr O DHC IP Add IP Add Netma Gatew DNS Camera Usernan	ame ses ses ses ses ses ses ses ses ses s	00:0D:F1:28:78:0 192.168.21 .144 255.255.255.0 192.168.21 .1 8 .8 .8 .8	
Camera N MAC Addr O DHC S stat IP Add Netma Gatew DNS Camera Usernan	ame ses ses ses ses ses ses ses ses ses s	00:0D:F1:28:78:0 192.168.21 .144 255.255.255.0 192.168.21 .1 8 .8 .8 .8	
Camera N MAC Addr O DHC IP Add IP Add Netma Gatew DNS Camera Usernan	ame ses ses ses ses ses ses ses ses ses s	00:0D:F1:28:78:0 192.168.21 .144 255.255.255.0 192.168.21 .1 8 .8 .8 .8	
Camera N MAC Addr O DHC IP Adc Netma Gatew DNS Camera Usernan Passwoo	ame ess P ic IP Iress isk ay Account	00:0D:F1:28:78:0	
Camera N MAC Addr O DHC IP Adc Netma Gatew DNS Camera Usernan Passwoo	ame ses ses ses ses ses ses ses ses ses s	00:0D:F1:28:78:0 192.168.21 .144 255.255.255.0 192.168.21 .1 8 .8 .8 .8	

settings are set to DHCP by default.	

- 7. To access the camera's web page, click on the 'Website' button.
- To save changes made to the camera's settings, 8. enter the username and password of the camera's admin account and click 'Apply'.
 - Select 'DHCP' for the camera to automatically receive its IP address from the DHCP server.
 - Select 'Static' to manually enter the camera's IP address, (Sub)Netmask, Gateway and DNS information.
 - The camera's IP must be set to static if connecting to Spectrum® IPVMS. 🚺 Contact your network administrator for more information.
 - 🌔 To access the camera from an external network, port forwarding must be set in your network's router.

STEP 7 - WEB VIEWER



The GUI display may differ by camera models.

- Find the camera using the DW IP Finder. 1.
- Double-click on the camera's view in the results table. 2.
- 3. Press the 'Website' button. The camera's web viewer will open up in your default web browser.
- 4. Enter the camera's username and password you setup in the DW IP Finder. If you did not setup a new username and password via the DW IP Finder, a message will direct you to setup a new password for the camera before gaining access.

Change admin's passv	vord	×
Old Password		
New Password		
Retype Password		
Modify Onvif User		
СНА	NGE PASSWORD	

To open the camera using the web browser:

- 1. Open a web browser.
- 2. Enter the camera's IP address and port in the address bar. Example: http://<ipaddress>:<port>. Port forwarding may be necessary to access the camera from a different network. Contact your network administrator for more information.
- 3. Enter the camera's username and password you setup in the DW IP Finder.

NOTE: Some menu options may not be available based on the camera model. See the full manual for more information.

NOTE:	Please see the full product manual for web viewer setup, functions and camera settings options.	HE
NOTE:	This products is covered by one or more claims of the HEVC Patents listed at patentlist.accessadvance.com.	Advance

digital-watchdog.com

Tel: +1 (866) 446-3595 / (813) 888-9555

Technical Support Hours: 9:00AM - 8:00PM EST, Monday through Friday

Copyright © Digital Watchdog. All rights reserved. Specifications and pricing are subject to change without notice.